

BROTHER TN-2350 GEAR RESET


OVER THE PHONE FIX

If the printer has an LCD Screen

1. Open the printer cartridge door.
2. Press & Hold the OK Button.
3. When message appears on screen release button.
4. Press STAR ZERO ZERO * 0 0
5. Shut the printer door
6. Cartridge is now reset

IN STORE FIX


1. Pull the Gear up

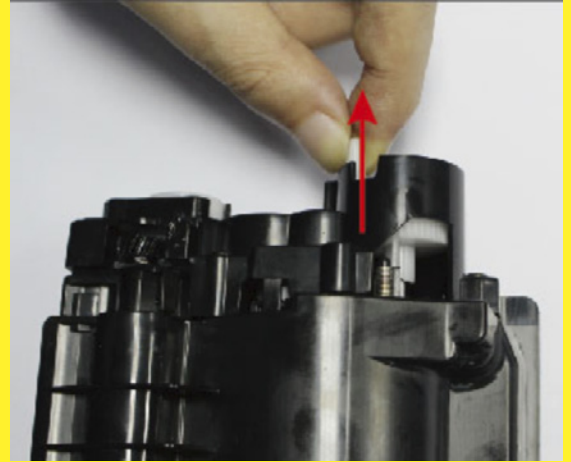

2. Lift & Rotate the gear counter clockwise to correct position.



3. Correct Position. White gear rib (A) is in contact with the Black Block (B)

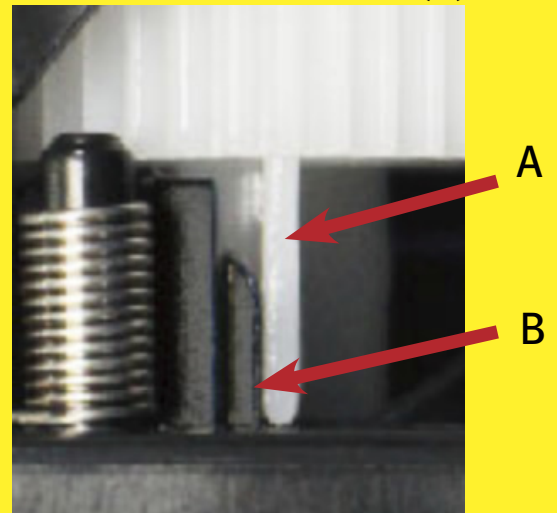

Incorrect or Empty Gear position.

No RIB

GAP.

