

1 – Remove the back cover of the machine unscrewing the four fixation screws.

2 – Unplug the electric cable from the pumps set.



3 – Remove the fixation screws and place the pumps set to the left side (machine's back view), in order to make enough working space. (it is not necessary to disconnect the hoses from the pumps)

4 – Cut the cable tie around the solenoid valve.



5 – Remove the valve fixation.



6-Pull out the valve.




7- Remove the screw on the top of it..



8- Make sure all the three connections are OK.

Using pliers, you may remove, one wire at a time, and reconnect them back.
Do not cut the wires. Use pliers only to grab the connector and pull it out.

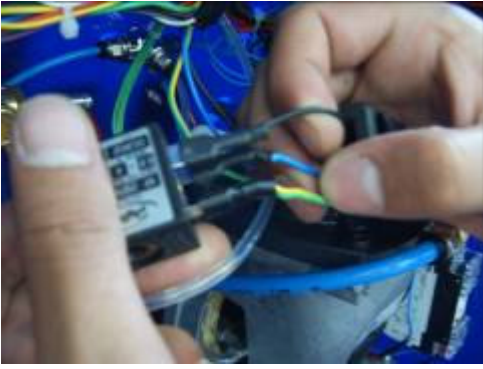

Also check if nothing is blocking the air flow trough the filter on left side of the conector (gloden piece).

